

## Aufstellanweisungen

 
51 1221  
(D,F,I,NL,GB,E)  
51 1337  
(D,F,I,S,DK,N)

 
## Gebrauchsanweisungen

51 1222  
(D,F,I,NL,GB,E)  
51 1489  
(D,F,I,S,DK,N)

## Programmtabellen

51 1223  
(D,F,I,NL,GB,E)  
51 1490  
(D,F,I,S,DK,N)

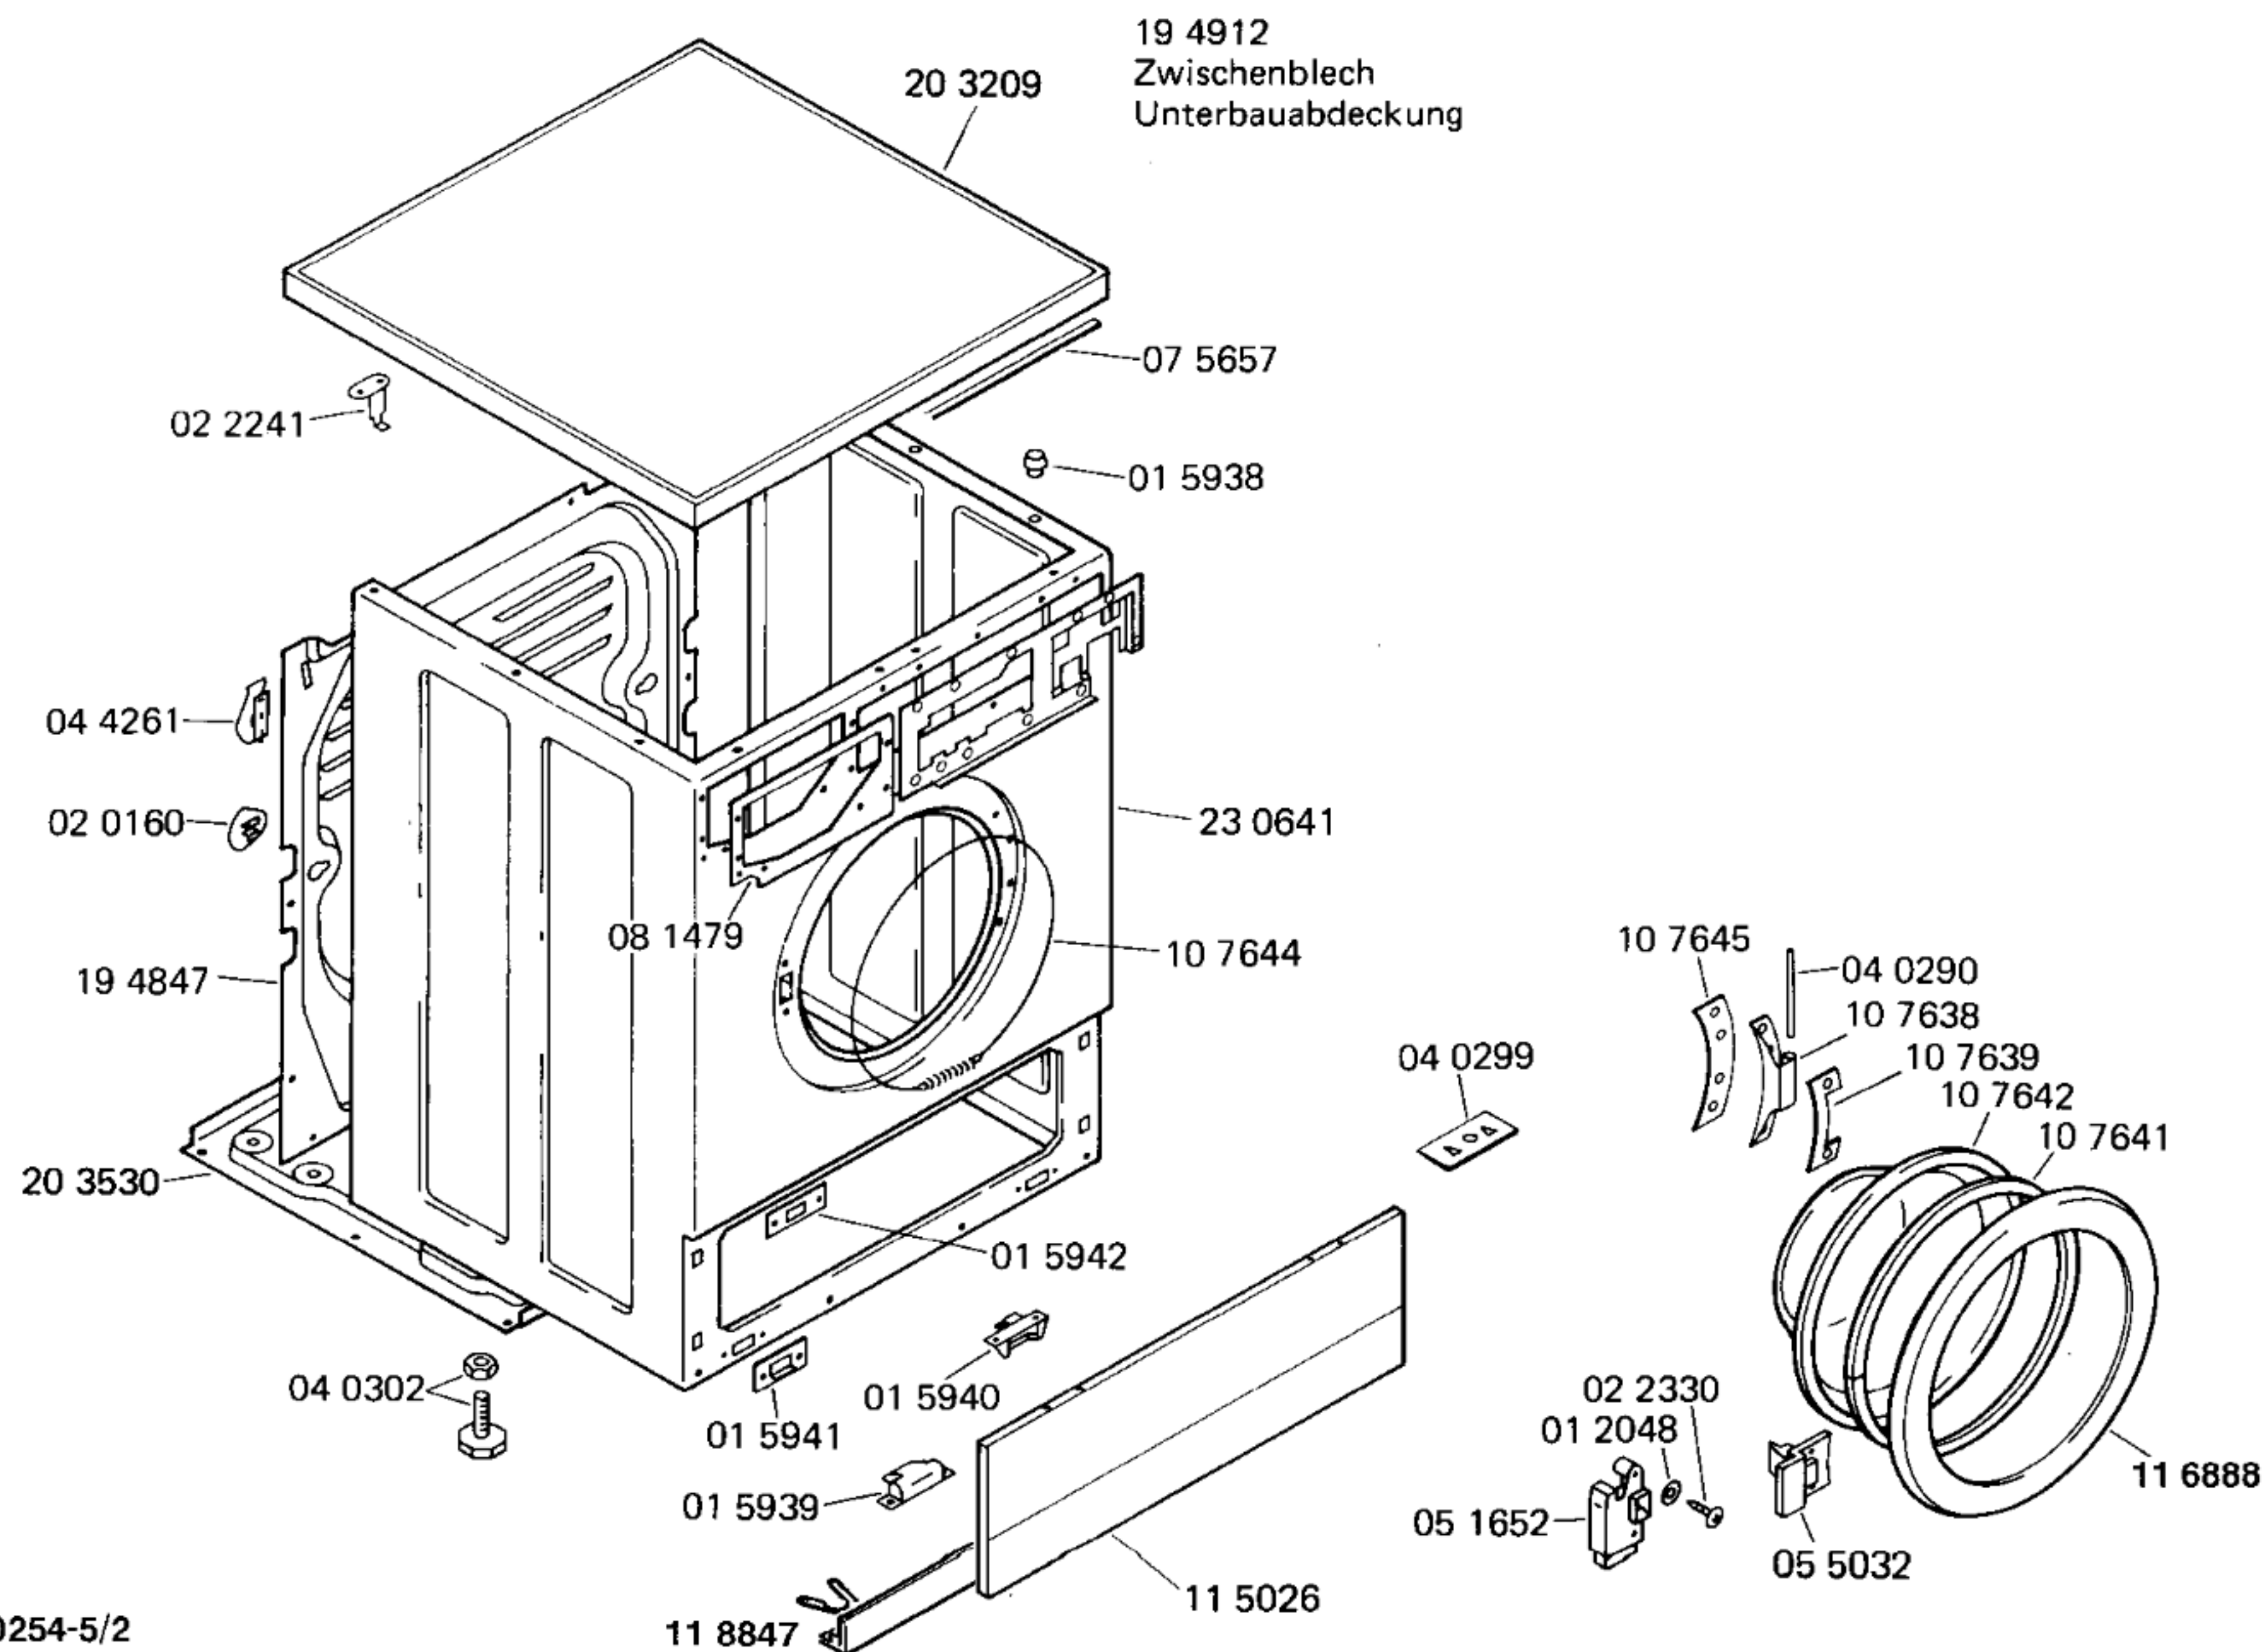

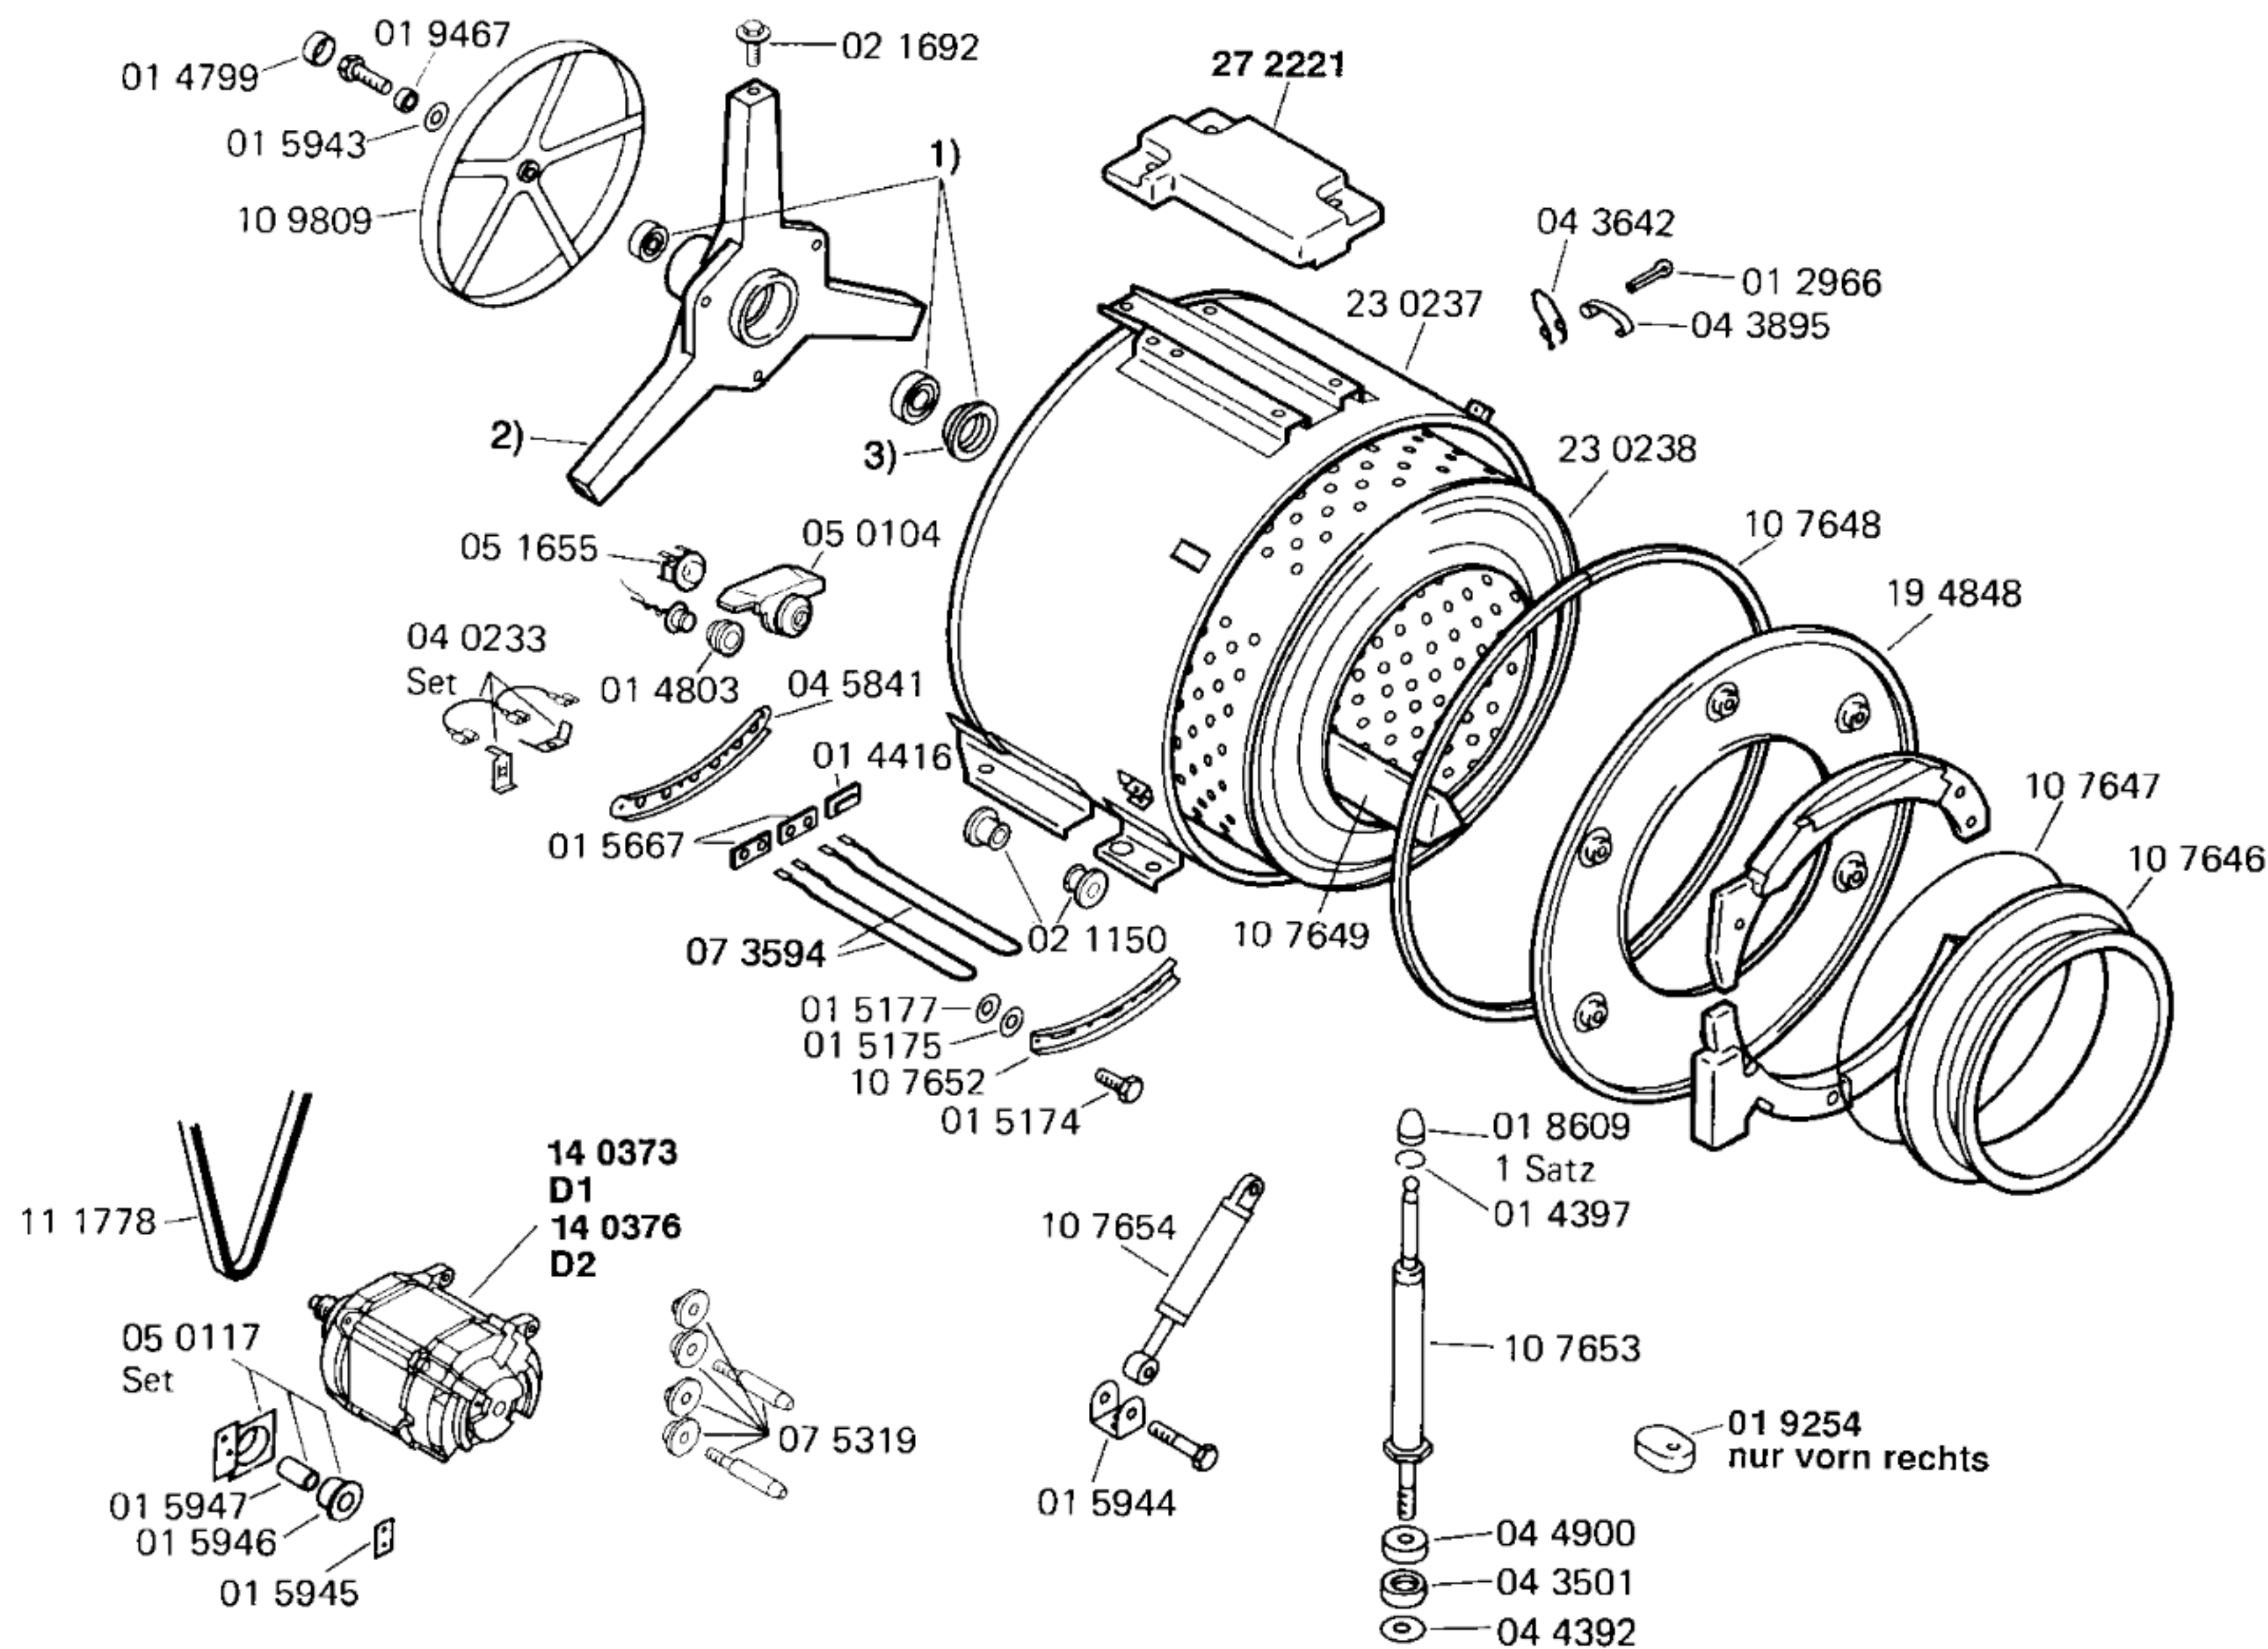

1) 10 7650  
Set - D1  
08 1480  
Set - D2

2) 20 0050  
D1  
20 0987  
D2

3) 04 0305  
D1  
05 1653  
D2

